



GREEK COFFEE MAKER
INSTRUCTION MANUAL




Model No.: S1428GCM

220~240V 50Hz 800W

DESCRIPTION

1. Lid
2. Switch button
3. Handle
4. Indicator Lamp
5. Base
6. Body
7. Spout

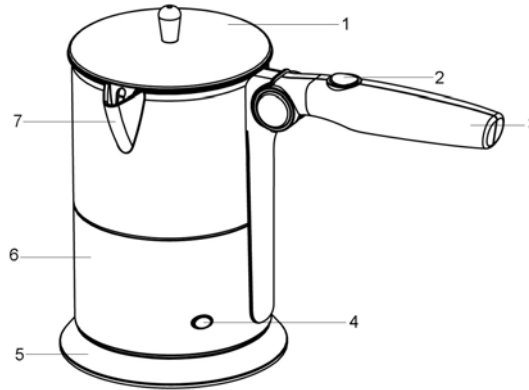

In order to obtain ultimate output from your appliance, please read carefully this user's manual and save it for further use.

IMPORTANT SAFEGUARDS

When using an electric appliance, basic safety precautions should always be followed. Including:

- Make sure that the voltage indicated on the appliance corresponds with the mains voltage in your home. Our company shall not be held liable for any failures owing to any discrepancy and such failures shall not be covered by the guarantee.
- Your device is for household use only. Do not use it for commercial or industrial purposes.
- Keep your appliance away from and out of reach of the children.

- Plug your device to a grounded socket. To prevent harming your appliance do not use extension cords that supply insufficient current. When using extension cords, make sure to use grounded socket, with the cable cross section of 1m m².
- Do not place the appliance over or near direct heat sources such as a stove, heating oven, etc.
- Ensure that the appliance is placed on a firm and flat surface. Do not put it on the edge of a table or bench. The least blow or knock may overturn it. Do not forget that it may be full of hot water.
- Do not let corn hang over edge of table or counter or touch any other appliances.
- Avoid actions that may harm or damage the cord or plug of your device .Do not carry your appliance by holding from the cord. To unplug the robot, hold the plug and NEVER pull by the cord.
- Never interfere with your appliance except for the purposes of cleaning and maintenance. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Such as by dropping down, etc. Do not attempt to repair it by yourself. Refer immediately to us.
- Always hold your appliance by its handle. Its outer surface may be hot.
- Unplug from outlet when not in use and before cleaning. Allow it to cool down completely before cleaning the appliance.
- User your appliance with its own power base unit only. Do not place on it those units belonging to any other appliance.
- When you have prepared your coffee., press on/off switch to tum the appliance off.
- You can use your coffee maker as a kettle also. In this case, when the water begins to boil switch off your appliance by pressing on/off switch since your unit would not be switched off automatically.

- If you want to re-boil your water, wait for about 15-20 seconds before switching on your appliance.
- Put sufficient quantity of cold water into your Greek Coffee Maker, according to the number of cup of coffee (for 3-4 persons, max).
- If you wish to prepare a medium-sugar coffee for 1 person, put 1 cup of water, 1 tablet of sugar. And 1 spoon of Greek coffee powder.
- Place the appliance onto the power base unit, and switch on the coffee maker by simply pressing on/off switch.
- At this time mix your coffee for one or two times.
- When the coffee starts bloating out, turn off the appliance and pour a little coffee into the cups (for foam).
- Replace your appliance onto the power base unit and restart the coffee maker, then pour the coffee to the cup when the prepared coffee bloats out again.
- You can prepare coffee in different measures according to your personal taste.

SAFETY CUT-OFF DEVICE

- Protection against running dry: If your coffee maker ever runs dry while operating, a protection against running dry will cut off the power automatically. In such cases, unplug the appliance from the outlet and allow it to cool down completely.

CLEANING

- Before cleaning your appliance, first ALWAYS read the instructions in the section "Important Safeguards".

BEFORE CLEANING TURN OFF THE ON/OFF SWITCH“。 ” LOCATED ON YOUR

COFFEE MAKER, UNPLUG FROM OUTLET, AND ALLOW IT TO COOL DOWN.

- Discharge the water from the appliance, and wipe the outside of it thoroughly with a dry or damp cloth.
- NEVER immerse the power base unit and the body into water, nor wash them in a dishwasher.
- Avoid using abrasive and chemical cleaning agents (liquid bleach, hydrochloric acid, etc.) in cleaning any accessories of the appliance.
- Make sure that the cord and mains plug are completely dry. If getting wetted, unplug iron outlet and dry both the cord and plug thoroughly.

DESCALING

- It is important to descale the appliance periodically as appropriate for the hygiene and energy saving purposes.
- Limes and scales contained in the used water will form a brown layer on the heating base, reducing the effectiveness of your appliance.
- Light formation of limes and scales can be easily removed with a brush (Do not forget to unplug the appliance before doing so).
- The decaling agents sold and available on the market to use on household utensils as well as the vinegar can be used for removing the collected hard scales.
- To clean your kettle with a descaling agent: Once you have boiled some quantity of water in the kettle add the decaling agent and mix them. Then, boil for 2-3 minutes more, empty the kettle, and rinse the inside of it 2-3 times repeatedly.
- To clean with ordinary vinegar: Fill your kettle with half a liter of ordinary vinegar and wait for one hour. Then, pour away the vinegar and rinse it 2-3 times repeatedly with clean water.
- To clean with citric acid: Once you have boiled 200 ml, of water, add 25 grams of citric acid and allow it to wait for 15 minutes. Then, empty the kettle

and rinse it 2-3 times repeatedly with clean water. Repeat this process, if necessary. Always add water when using citric acid, and do not clean without water.

STORING YOUR GREEK COFFEE MAKER

- Once you have unplugged the mains plug, place it on the cord storage located under the power base unit.
- If the kettle ever runs without any water inside while operating a safety cut-off device will automatically cut the power off. In such a case you must allow it to cool down completely before refilling with cold water.
- Avoid contact with steam to be ejected from spout when the water is boiling and do not let children to use the appliance.
- Never open the lid while the water is boiling. Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
- Do not fill above MAX level.
- NEVER immerse the appliance power base unit, or mains plug in water or other liquids, nor wash in a dishwasher, nor use in bathroom or any other places with a high rate of moisture.
- NEVER leave the power base unit and electrical connection ends of your device in a damp state. If they get wet unplug before drying and do not operate the appliance before having it dried completely.

WARNING

- Do not turn the coffee maker on when it is not filled with water

- When there is no water inside the appliance. ALWAYS switch off the appliance.

USING THE COFFEE MAKER

- When in use the outer surface of your appliance becomes heated, therefore you should not touch the hot surfaces. When preparing coffee or when water starts boiling, keep your hands away from the spout.
- The appliance must be switched off automatically or manually before attempting to lift the kettle from the power base unit.
- Do not use your coffee maker for any other purposes other than boiling water or preparing coffee. Do not fill with any other liquids or solutions.
- Before using for the first time, clean the appliance and then fill water up to the MAX level. Turn off your appliance when the water starts boiling.
- At this point make sure that the water is filled up to the maximum level.
- Pour away the water and allow your appliance to cool down.
- After boiling the water some powder may form due to the hardness of the water. This is quite natural and has no adverse effects for human health.
- When boiling water in your appliance, the lid MUST be closed.
- You can either use your appliance as kettle, or as Greek coffee maker.

FILLING WITH WATER

- When filling with water, ALWAYS remove the reservoir from its power base unit. By doing so, you can prevent the water pound on the table.
- Do not fill more than 250ml of water (the "MAX" level).
- If you attempt to boil water exceeding the maximum level, the boiled water

may overflow from the spout.

BOILING WATER

- Pull and unwind the mains cord that is inside of a mechanism under the power base unit of the appliance, and connect the plug to a grounded socket.
- Open the lid of your Greek Coffee Maker and fill with water (maximum 250ml.) as much as you require and close the lid.
- Place the coffee maker on the power base unit.
- Press the “ ON” switch “ 〇 ”, Indicator light will turn on and the water will begin

to warm up. When the water boils, set the “ON” switch “ 〇 ” to the position “ 〇 ” (Off).

- If you desire to stop the boiling function you can press the “ OFF” switch.
- If you wait to stop the boiling function early, press the “ 〇 ” (Off) switch in order to turn off your coffee maker.

PREPARING GREEK COFFEE

- By using your appliance you can prepare coffee for up to 3-4 persons.
- Consider your cup to be used or MAX level as measurement.

Disposal



Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste.

Please dispose of this equipment at your local community waste

collection/recycling centre. In the European Union there are separate collection systems for used electrical and electronic products.
Please help us to conserve the environment we live in!

DECLARATION OF CONFORMITY

This product complies with the requirement of the directives

EMC-Directive: 89 / 336 / EEC

Low Voltage Directive: 73 / 23 / EEC

CE Marking: 93 / 68 / EEC

EcoDesign EuP Directive: 2009/125/EC

Declare that the Greek coffee maker MORRIS S1428GCM is in compliance with following norms:

EN 55014-1:2006

EN 61000-3-2:2006

EN 61000-3-3:1995+A1+A2

EN 55014-2:1997+A1

EN 60335-1:2002+A11+A1+A12+A2+A13

EN 60335-2-15:2002+A1+A2

EN 62233:2008

EN 62301:2005



EXCLUSIVE IMPORTER IN GREECE:

Amiridis – Savidis S.A.

- 33, Vas. Olgas Street – P.O. 54641 – Thessaloniki, Greece.
Tel: +30 2310-850107, 2310-850108, Fax: +30 2310-867835
- 45 Posidonos St. – O.P. 18344 – Moschato, Athens, Greece

